

# TerraClean Lifetime Protection Plan

Plan	Maximum mileage before first service	Maximum coverage per service
Platinum Plus Coverage	36,000 Mi / 60,000Km	\$4,000
Gold Coverage	75,000 Mi / 120,000Km	\$2,000

Service		Chemical Protection	Service Interval		
			Every 6,000 miles 10,000km	Every 24,000 miles 40,000km	Every 30,000 miles 50,000km
Fuel	Fuel Protection with O2 Sensor Protection	Premium Tune Up Kit or Super Strength Tune Up Kit plus Optima Fuel System Cleaner or Fuel System Treatment	*	•	
	Fuel Protection	Premium Tune Up Kit or Super Strength Tune Up Kit plus Optima Fuel System Cleaner or Fuel System Treatment		•	
	Diesel Fuel Protection	TerraDiesel Multifunction Fuel Treatment and TerraDiesel Fuel Injector Cleaner	•		
Engine	Engine Protection	Engine Treatment	•		
Fuel and Engine	Engine and Fuel System System with O2 Sensor Protection	Optima Fuel System Cleaner and Engine Treatment	•		
Power Steering	Power Steering Protection	2 Part Power Steering Kit			•
Cooling	Cooling System Protection	Cooling System Flush Kit or Cooling System Flush with Cooling System Sealant			•
Power Train	Automatic Transmission Protection	Automatic Transmission Cleaning Kit or Anti-Shudder Transmission Kit or Automatic Transmission Cleaner with TerraClean Universal ATF Conversion Supplement			•
	Transfer Case / Manual Transmission Protection	Synthetic Transfer Case / Manual Transmission Fluid or Gear Oil Treatment or Universal ATF Conversion Supplement			•
	Differential Protection	Synthetic Gear Oil or Gear Oil Treatment or Limited Slip Treatment			•
Brake Fluid	Brake Fluid Protection	High Performance Brake Fluid or DOT3 Brake Fluid			•

\* Optima or Fuel System Treatment only required for this mileage interval.

# TerraClean Lifetime Protection Plan

Service		Coverage
Fuel	Fuel Protection with O2 Sensor Protection	O2 Sensors, Fuel Injectors and Intake Valves. (Port Fuel Injected Sequential fuel injected or carbureted engines only)
	Fuel Protection	Fuel Injectors and Intake Valves. (Port Fuel Injected Sequential fuel injected or carbureted engines only)
	Diesel Fuel Protection	Covers Fuel Injectors.
Engine	Engine Protection	Engine Pistons, Rings, Cam Shafts, and Bearings, Turbo Bearings, Lifters, Oil Pumps, Wrist Pins, Bushings, Push Rods, Crankshaft and Bearings, Rods, and Rod Bearings, Timing Chains, Timing Gears or Sprockets, Intake Valves and Guides, Cylinder Liners or Bores, Rocker Arms and Pivots and Distributor Drives.
Fuel and Engine	Engine and Fuel System with O2 Sensor Protection	Engine Pistons, Rings, Cam Shafts, and Bearings, Turbo Bearings, Lifters, Oil Pumps, Wrist Pins, Bushings, Push Rods, Crankshaft and Bearings, Rods, and Rod Bearings, Timing Chains, Timing Gears or Sprockets, Cylinder Liners or Bores, Rocker Arms and Pivots and Distributor Drives. O2 Sensors, Fuel Injectors and Intake Valves. (Port Fuel Injected Sequential fuel injected or carbureted engines only)
Power Steering	Power Steering Protection	Covers any lubricated parts contained within the power steering gearbox, rack and power steering pump.
Cooling	Cooling System Protection	Heater Core, Water Pump, Freeze Plugs and Radiator.
Power Train	Automatic Transmission Protection	Covers any lubricated parts contained within the automatic transmission housing or case except seals and gaskets.
	Transfer Case / Manual Transmission Protection	Covers the lubricated parts contained within the Transfer Case / Manual Transmission housing or case except seals and gaskets.
	Differential Protection	Covers the lubricated parts contained within the differential housing or case.
Brake Fluid	Brake Fluid Protection	Covers the pump, valves, master cylinder, calipers and metalized hoses.